

GAMESIR G7 SE

WIRED CONTROLLER FOR XBOX



ENGLISH

<https://www.gamesir.hk/pages/manuals-gamesir-g7-se>
(E-MANUAL)

 
PACKAGE CONTENTS

GameSir-G7 SE *1 3m USB-C Cable *1
User Manual *1 Thank You & After-sale Service Card *1
GameSir Sticker *1 Certification *1

REQUIREMENTS


*Xbox One / Xbox Series X|S / PC (Win 10 or above) with USB port

DEVICE LAYOUT

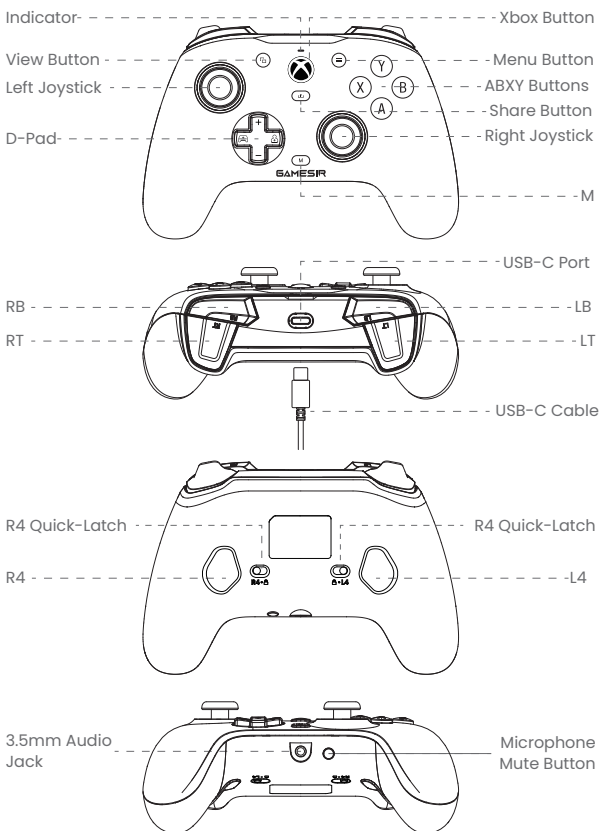

CONNECT

 
Solid White=Connected



VOLUME CONTROL


1. Hold the M button+D-pad's Up/Down to Increase/Decrease the Master Volume. (10 levels in total)

 *There will be a beep when adjusting to the maximum/minimum level.

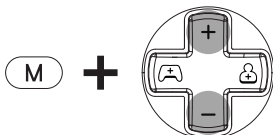

2. Hold the M button+D-pad's Left/Right to Increase game volume while Decreasing voice chat volume/Decrease game volume while Increasing voice chat volume.

 
*There will be a beep when adjusting to the maximum/middle/minimum level.

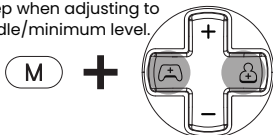

3. Microphone Mute Function: When your headphone/earphone is plugged in, press the Microphone Mute Button, the indicator will become solid red and the Microphone Mute function is On. Press the Microphone Mute button again, the indicator will go out and the Microphone Mute function is Off (Default).



 BACK BUTTONS SETTINGS



NO PRESET BUTTON VALUES

(Mappable buttons: A/B/X/Y/LB/RB/LT/RT/L3/R3/D-pad/Menu/Xbox/View Button)

1. Set R4/L4 button value: Hold the M+R4/L4 buttons simultaneously for 3s. When the indicator blinks slowly, tap the button you want to map to R4/L4. The indicator turns solid to indicate R4/L4 button value is set.

2. Cancel R4/L4 button value: Hold the M+R4/L4 buttons simultaneously for 3s. When the indicator blinks slowly, tap R4/L4 button. The indicator turns solid to indicate R4/L4 button value is canceled.

JOYSTICKS & TRIGGERS CALIBRATION

1. Hold the View (⌘) + Menu (≡) + Xbox buttons until the USB-C cable is inserted into the PC's USB port. The indicator will slowly blink white.
2. Ensure that LT & RT and the left & right joysticks are not touched. Then Press the A button. The indicator will go out.
3. Press LT & RT to their maximum travel. Rotate the joysticks at their maximum angles for 3 times. Press the A button. The indicator becomes solid white to indicate the calibration is over.
4. After the calibration is over, it's required to unplug and replug the controller before using.

CUSTOMIZATION VIA "GAMESIR NEXUS" SOFTWARE

Download "GameSir Nexus" software at Microsoft Store on Xbox/PC or gamesir.hk

Use the "GameSir Nexus" software to upgrade firmware and create 3 custom profiles. The profile includes button mapping, joystick & trigger zones adjustment, vibration level control, etc.

*If the R4/L4 button value set in the software is different from the manual setting, the latest setting shall prevail, and the former will be directly overwritten.

PROFILE SWITCH

Press M + A/B/X/Y buttons in sequence to switch to the corresponding profile.

M + Y = Default M + B = Profile 1

M + A = Profile 2 M + X = Profile 3

JUST IN GAME.
www.gamesir.hk

Microsoft, Xbox, Xbox "Sphere" Design, Xbox Series X, Xbox Series S, Xbox Series X|S, Xbox One, Xbox Game Pass, Windows 10/11 are trademarks of the Microsoft group of companies. All other trademarks are the property of their respective owners.



<https://www.gamesir.hk/pages/ask-for-help>
(CUSTOMER SERVICE)