


GameSir KALEID

Connection:


Solid White=Connected

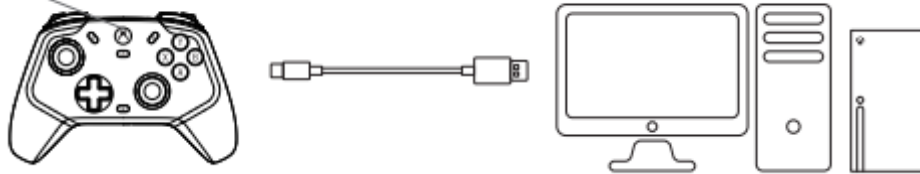

Volume control:


1. Hold the M button + D-pad's Up / Down to Increase / Decrease the Master Volume. (11 levels in total)

* There will be a beep when adjusting to the maximum / minimum level.

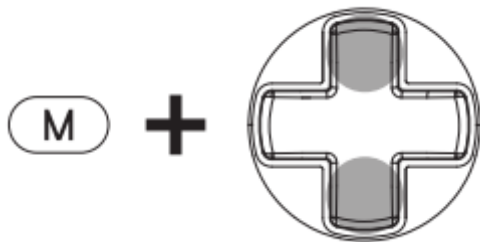

2. Hold the M button + D-pad's Left / Right to increase game volume while decreasing voice chat volume / decrease game volume while increasing voice chat volume.

* There will be a beep when adjusting to the maximum / middle / minimum level.

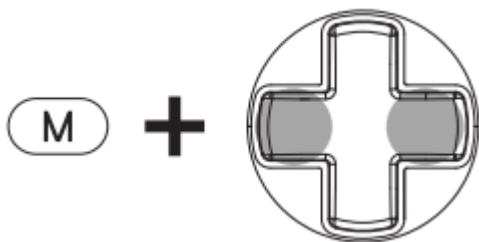

3. Microphone Mute Function: When your headphone / earphone is plugged in, double press the M button, the Microphone Mute Light will become solid red and the Microphone Mute Function is On. Double press again the M button, the Microphone Mute Light will go out and the Microphone Mute Function is Off (Default).

When the Microphone Mute Function is On, hold the M button to temporarily turn off the Microphone Mute Function, and release the M button to restore Microphone Mute Function to On.



--- Solid Red
=Microphone Mute

Back buttons settings:



NO PRESET BUTTON VALUES


(Can be programmed to A/B/X/Y/LB/RB/LT/RT/LS/RS/D-pad/Menu/View/Share Button)

1. Set L4 / R4 button value: Hold the M + L4 / R4 buttons simultaneously for 3s. When the Xbox button blinks slowly, press the button you want to map to L4 / R4. The Xbox button turns solid to indicate L4 / R4 button value is set.
2. Cancel L4 / R4 button value: Hold the M + L4 / R4 buttons simultaneously for 3s. When the Xbox button blinks slowly, press L4 / R4 button. The Xbox button turns solid to indicate L4 / R4 button value is canceled.

* In setting mode, after 10s of inactivity the controller will automatically exit the setting mode and the button values will remain unchanged.



Button combinations:

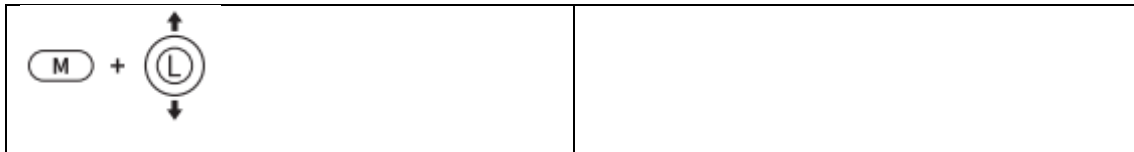Button Combinations	Descriptions
Hold the M + LT / RT buttons for 2s 	Enable / Disable hair trigger After hair trigger mode is on: The left / right LED strip will automatically light up when the LT / RT button is pressed. *The setup will still be saved after restart.
M + Left Stick's Left / Right 	Switch among 4 light effects *The setup will still be saved after restart.
M + Left Stick's Up / Down	Increase / Decrease LED brightness 5 levels, default is the brightest * The setup will not be saved after restart.



Sticks & Triggers calibration:



1. Hold the View  + Menu  + Xbox buttons until the USB-C cable is inserted into the PC's USB port. The Xbox button will slowly blink white.
2. Ensure that LT & RT and the left & right sticks are not touched. Then Press the A button. The Xbox button will go out.
3. Press LT & RT to their maximum travel. Rotate the sticks at their maximum angles for 3 times. Press the A button. The box button becomes solid white to indicate the calibration is over.
4. After the calibration is over, it's required to unplug and re-plug the controller before using.

Profile switch:

Press the M + A / B / x / Y buttons in sequence to switch to the corresponding profile.

M + Y = Default

M + B = Profile 1

M + A = Profile 2

M + X = Profile 3